


SECTION A-A

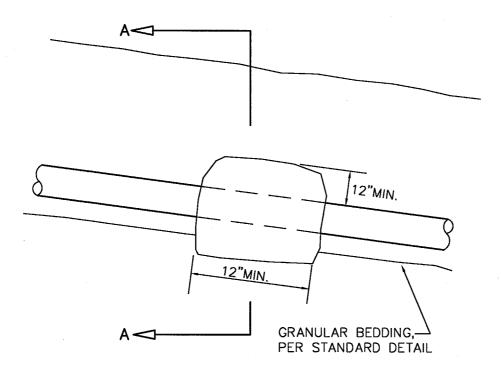

NOTE:

SOIL CEMENT BLOCKS PLACED OVER AND AROUND PIPE. TAMPED INTO PLACE BEFORE PLACING BACKFILL. USE 10% CEMENT WITH 90% NATIVE SOIL AND WATER TO SUIT TO FORM A DRY MIX THAT WILL HOLD ITS SHAPE WHEN MOLDED INTO A BALL. SOIL CEMENT BLOCKS REQUIRED ON SLOPES 20% OR GREATER.



City of Bellevue

SURFACE WATER UTILITY

TITLE

SOIL/CEMENT PIPE ANCHOR

JULY, 1998

NO SCALE

NO. D-54